

# EasyRiser Kit for use with Trimline Canopy with Rear Door Frame

## Instructions for Use

The EasyRiser makes it simple to lift the canopy roof without needing assistance from a second person.

This kit contains (1) Door Ell. Additionally, you will be using the Door Ell and Rear Door Leg from your Rear Door Frame.




## Getting Ready to Raise the Roof

- 1. As you set up the canopy roof frame:** Slide Door Ell Joints onto the upper horizontal poles at the front and back of the frame, locating them as close to center as possible. Do not tighten thumbscrews.
- 2.** Finish assembling the canopy roof frame and rafters.
- 3.** Temporarily attach your Rear Door Frame leg to the Door Ell on the front horizontal pole, allowing the leg to sit inside the canopy frame.

**For 7 ft tall canopies** you may choose to leave legs in “collapsed” position and extend them one at a time once the roof is lifted -OR- you may set up with the legs fully extended.

**For 8 ft or 9 ft tall canopies,** set up with the legs “collapsed” and extend one at a time after lifting the roof.

- 4.** Spread canopy top over roof frame.

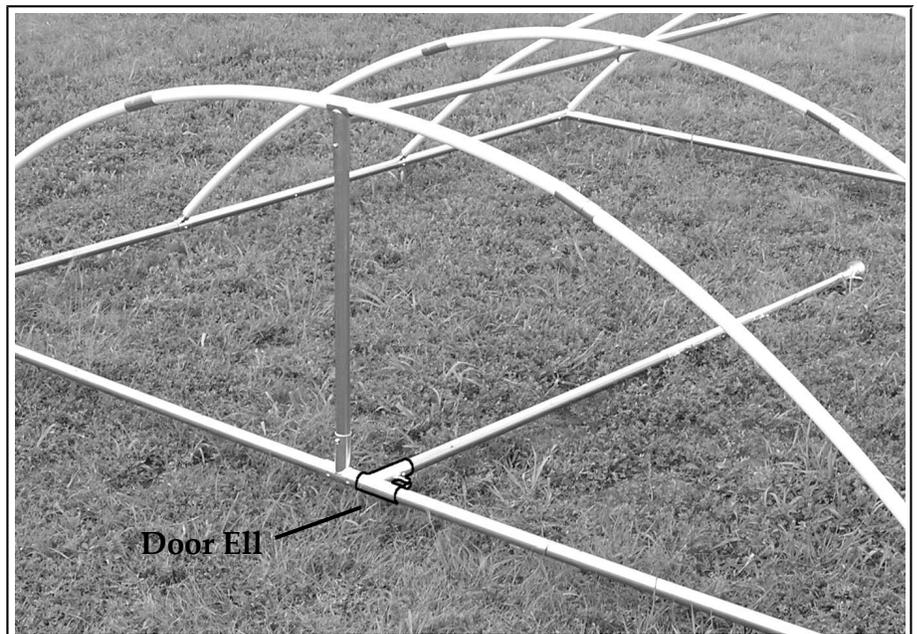

**\*Note:** If space allows, it is helpful to position the roof frame approximately two feet further back into your booth space than you wish the canopy to stand.

(over, please)

5. Standing at the front of the canopy, lift front edge of roof frame until the Door Leg swings down to support the roof.

6. Insert two of the legs into the front Corner Joints. You may choose to install the telescoping legs in their extended position, or you may install them in the collapsed position and extend them one at a time once they are all in place. Remove the Door Leg and swivel the Door Ell up out of the way, securing it with the thumbscrew.



Canopy roof raised and supported on Door Leg



Front legs attached, removing the Door Leg

7. Now insert Rear Door Leg into Door Ell at the rear edge of the roof frame. Lift the back edge of the canopy, allowing leg to swing into place to support roof while you attach the remaining two legs. You may need to use the Rear Door Leg itself to push the frame all the way to it's full height.

8. With the rear corner legs in place, slide the Rear Door Leg into position approximately 3ft from corner and follow Rear Door Frame instructions to complete set-up.

9. **To take the canopy down:** After removing all StaBars, slide Rear Door Leg back to the center of the rear wall and remove rear corner legs. Lower back edge of canopy carefully and remove Rear Door Leg. Insert Door Leg into Door Ell at front edge, remove front corner legs and lower roof frame to ground.



Pushing frame up using the Rear Door Leg

**A word of caution for windy days:** All canopies are vulnerable to wind gusts until they are securely tied or weighted down. Be especially careful while you have the front legs installed and the back edge of the canopy resting on the EasyRiser pole. Ask a neighbor to help hold it down while you finish installing the legs.