

EasyRiser Kit for 7 ft. tall TrimLine Canopy with StaBars

Instructions for Use

The EasyRiser makes it simple to lift the canopy roof without needing assistance from a second person.

Parts:

- (1) 4" Female Pole Section with chrome end cap
- (1) 28" Female Pole Section with chrome end cap
- (2) StaBar Ell Joints




1. **As you set up the canopy roof frame** (page 2 of your TrimLine Setup Instructions):
Slide StaBar Ells onto the upper horizontal poles at the front and back of the frame, locating them as close to center as possible.
2. Finish assembling the canopy roof frame and rafters.
3. Assemble canopy legs with feet attached at the bottom (page 6 of TrimLine Instructions).

CHOOSE: To set up your TrimLine on shorter legs, set the leg at the shorter "collapsed" length with the "travel button" engaged (you will extend the legs to their full height one at a time after the roof is raised).

-OR- For full height set up, extend legs before lifting roof.

4. At the front of the canopy, attach one of your leg poles to the StaBar Ell you installed on the front edge of the canopy. Attach the Easy Riser pole to the Ell on the back edge, allowing pole to sit inside the frame.
5. Attach the female pole section with chrome end cap (choose 4" for shorter set-up -OR- 28" for full height set-up) to one of the male pole sections from your StaBar kit. This is your Easy Riser pole for use at the back of the TrimLine. Attach to StaBar Ell at the back edge of roof frame.

*Leave the thumbscrews of the StaBar Ells loose so the joints can swivel as you lift the roof.

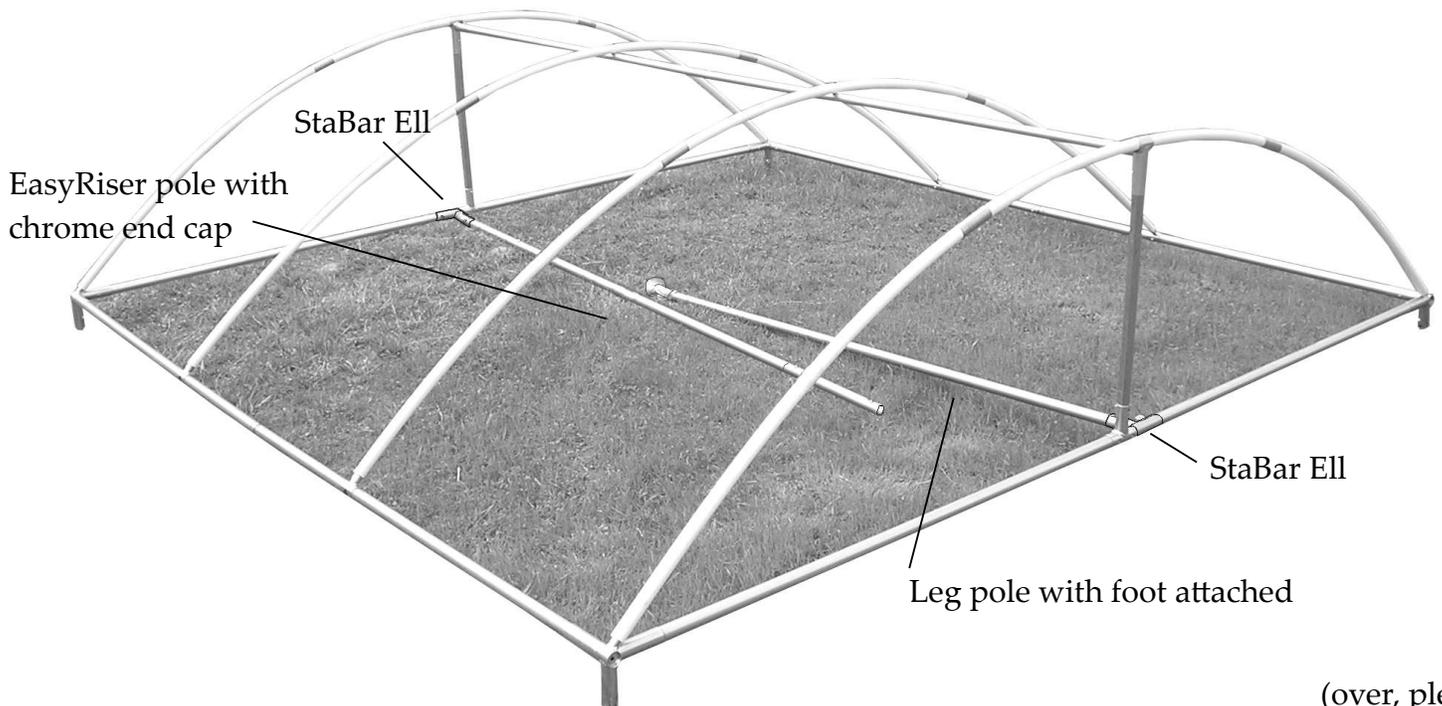

(over, please)

6. Spread canopy top over roof frame.
7. Standing at the front of the canopy, lift front edge of roof frame until the leg pole swings down to support the roof.
8. Insert two of the remaining legs into the front Corner Joints. Remove the center leg pole and swivel the StaBar Ell out of the way, securing it with the thumbscrew.
9. Before raising the canopy onto it's back legs, step inside and secure the top to the frame as described in the TrimLine instructions.



Canopy roof raised and supported on telescoping leg pole



Front legs attached, removing the leg Pole

10. The back of the canopy can now be lifted, letting the EasyRiser pole swing into a vertical position to support the top while you attach the back legs. You may need to use the EasyRiser pole itself to push the frame all the way up, if it's difficult to reach at it's full height. Remove the EasyRiser pole after the legs are in place and swivel the StaBar Ell out of the way.
11. If you set up on shorter legs, you can now extend the legs to their full height one at a time.

To take the canopy down: Reinstall the rear EasyRiser pole and remove rear legs first, then remove EasyRiser pole and lower frame to the ground. Repeat at the front, using a leg pole.



Pushing frame up using the rear EasyRiser pole

A word of caution for windy days: All canopies are vulnerable to wind gusts until they are securely tied or weighted down. Be especially careful while you have the front legs installed and the back edge of the canopy resting on the EasyRiser pole. Ask a neighbor to help hold it down while you finish installing the legs.